
Bluetooth Headset

Brand Name: Perfect Choice

Model Name: PC-116127

FCC ID: ZF8-PC-116127

Multipoint

1. Press and hold the multifunction button for 6 seconds to switch on the headset, it automatically enters pairing mode, the red and blue indicator lights start flashes alternately.
2. Activate the bluetooth feature on the first and the second mobile phone, and set them to search for the new bluetooth devices
3. Select 'Iblue6' from the list of found devices on both mobile phones simultaneously and connect.



Operations

1. **Answer a call:** Quickly press the multifunction button to answer the phone call, Iblue6 will read the incoming phone number.
2. **End a call:** Quickly press the multifunction button to hang up the phone call during a call, with English voice prompt "call terminate".
3. **Reject a call:** Press and hold the multifunction button to reject a call.
4. **Last number redial:** Press the multifunction button twice to redial last number when the headset is connected to mobile phone and in standby status.
5. **Switch music and calls:** If you receive or make a call while listening to music, the music is paused until the call ends.

Charging

The indicator light will be red while charging. Once fully charged, the indicator light will be a steady blue, charge time is 1.5 hour on an empty battery.

Clear settings


To clear the pairing settings from the headset, switch off the headset and press and hold the the multifunction and volume adjust button for 4 seconds, then connect the headset to a charger.

Headset reset

To reset the headset. switch on the headset, press and hold the multifunction button and connect the headset to a charger, release the multifunction button after connection with the charger for 2 seconds.

Battery indicator:

The current battery status of headset will be displayed in top right corner after the headset connected to IOS devices.

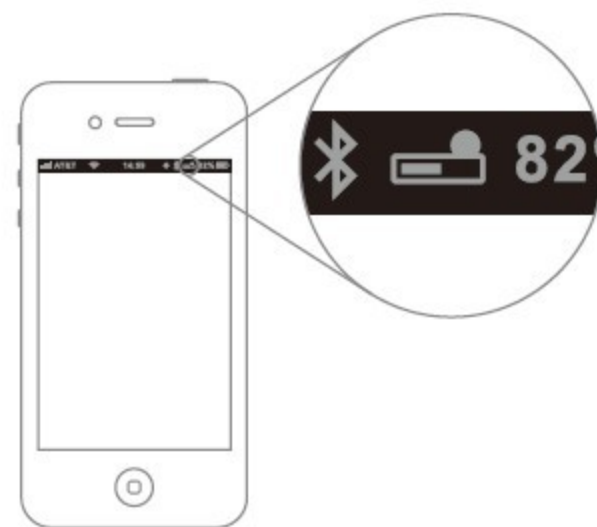

To know more about the headset

Talktime: 4 hours

Music time: 4 hours

Standby time: 120 hours

Bluetooth version: 4.0

Bluetooth profiles: A2DP/HFP/HSP


Solution: CSR

Noise reduction: 2-MIC CVC noise reduction

Wireless range: 10m

Weight: 9.5g

Size: 66.5 x 14 x 21 mm

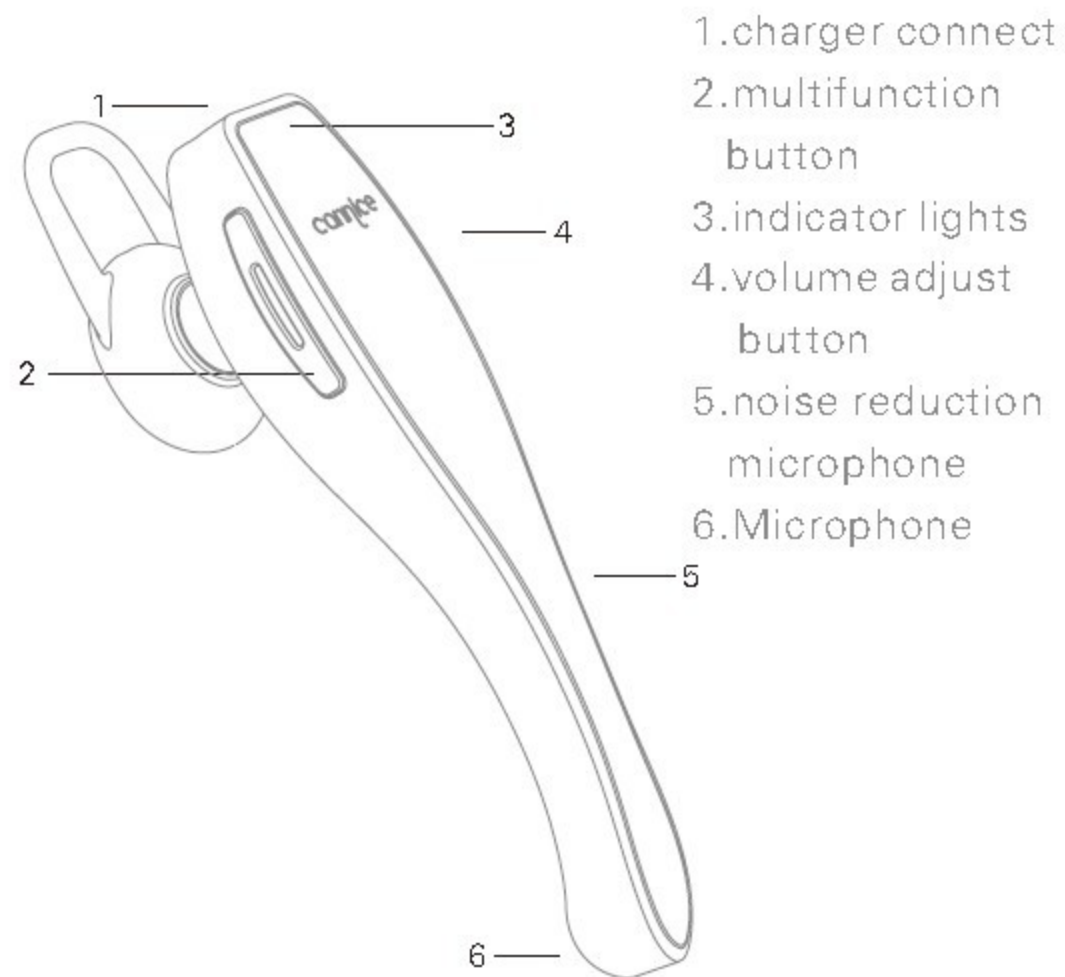

Basic operations

1. **Adjust the volume:** Press volume adjust button to adjust the volume step by step, with beeps when in maximum volume. press volume adjust button again, the volume will be adjusted from Maximum to Minimum.


2. **Multifunction button:** for operations included switch on/off, pairing, answer/end calls etc.

3. **Indicator lights and voice prompts:** when the headset start pairing, the red and blue lights flash alternately, with voice prompt 'on'; red light flashes once when the headset is switched off, with voice prompt 'off'; blue light flashes in every 5 seconds when in standby status; the blue light flashes continuously when there is incoming calls, the blue light will read the phone number; the blue light flashes in every 5 seconds when ending a call, with voice prompt 'call terminate'; the red indicator light keeps lighting when the headset is charging; the red light is off and blue light is on after fully charged.


Pairing

1. Press and hold the multifunction button about 5 seconds to switch on the headset, it automatically enters the pairing mode, the red and blue indicator lights flash alternately.

2. Activate the Bluetooth feature on your phone or other devices, and set it to search for new Bluetooth devices.

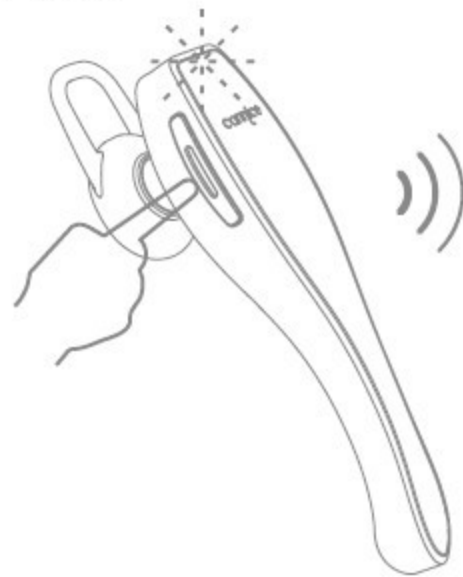

3. Select "ibblue6" from the list of found devices on your phone or other devices and connect, if necessary, enter passcode 0000 to pair and connect the headset to your device. Now you can use "ibblue6" for phone calls or listening to music.

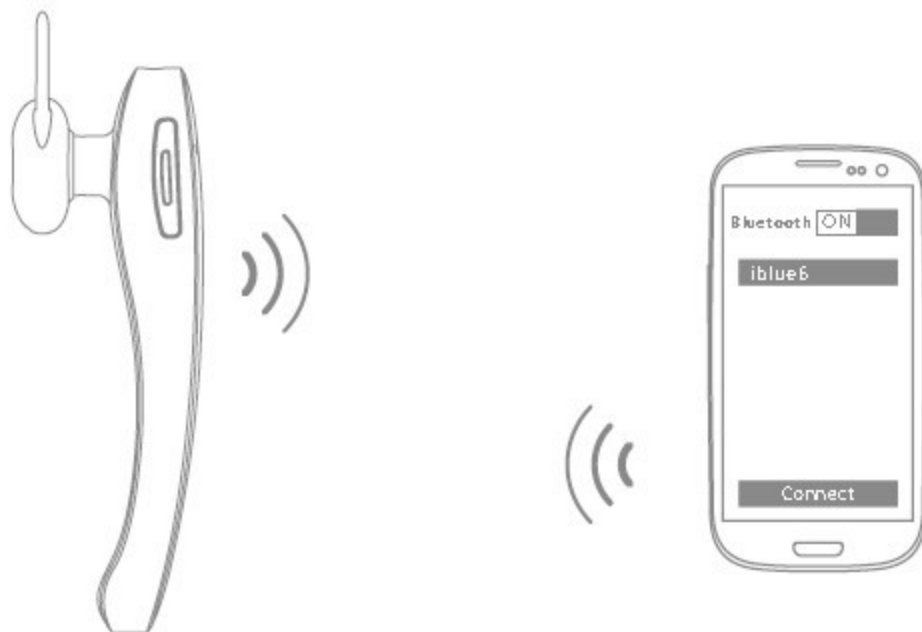

Important Regulatory Information

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.